shintaro

15” Digital Photo Frame

User Manual

shintaro.com.au

shintaro

TABLE OF CONTENTS

SAFETY INFORMATION / PACKAGE CONTENTS…....1

SPECIFICATION SUMMARY……..……..2

PHOTO FRAME INTRODUCTION…..…… 3

QUICK START…… .4

OPERATION GUIDE……4

OSD MENU ……..……....10

FAQ……11

Safety Information

- Keep away from water, moisture and dusty areas.
- Working temperature 0-40 ^{0}C. Never store in a hot or very cold place.
- Be careful not to drop or knock the photo frame.
- Never try to open the case yourself, always seek technical support.
- Connect the AC adaptor to both the DC IN jack and to the power outlet. (mains socket)
- Only use attachments / accessories approved by the manufacturer.
- When left unused for a long period of time, the unit should be unplugged from the household AC outlet.

Warning: To reduce the risk of fire or electric shock, do not expose to rain, moisture, dripping or splashing.

Package Contents

Digital Photo Frame

Remote Control

Adapter

USB cable

Spec Summary

Main Features

Play digital photos as a slideshow with background music
Play music and video
Display calendar / clock / alarm
Rotate and zoom photo
Brightness, contrast and saturation adjustable
Built-in 1GB memory
Auto timer on & off
Easy to use on-screen menu & button control

Memory Card Support

Secure Digital (SD)
Multi Media Card (MMC)
Memory Stick,MS Pro,MS Duo, MS Pro Duo (MS)
Secure Digital High Capacity (SDHC)
Compact Flash (CF)

File Format Support

Pictures:JPEG up to 16 megapixels
Video:MPEG-1\2\4, Motion JPEG
Audio:MP3

Side Navigation Buttons

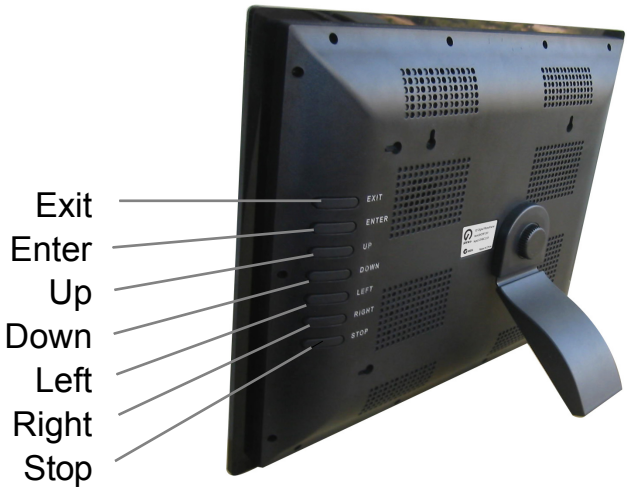

4 in 1 Card Reader & USB Ports

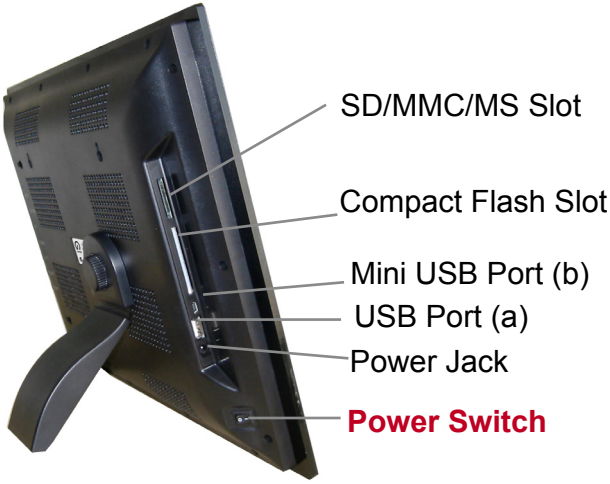

Remote Control

Quick Start

Step1 Insert the jack of the DC adaptor into the digital photo frame, and then plug the DC adaptor into a standard power outlet.

Step 2 Turn on at Power Switch (see previous page).

Operation Guide

1. Main Menu

1) Memory select: show the memory device inserted
2) Setup: adjust frame settings
3) Calendar: display a calendar, clock and alarm.

2. Setup

To make change settings on the DPF

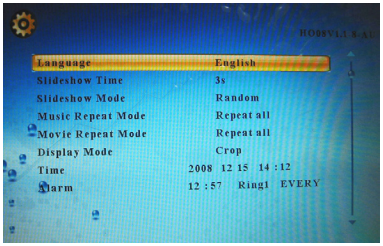
Language English
Slideshow Time 3s
Slideshow Mode Random
Music Repeat Mode Repeat all
Movie Repeat Mode Repeat all
Display Mode Crop
Time 2008 12 15 14 :12
Alarm 12 :57 Ring1 EVERY

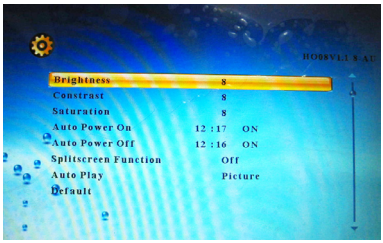

Operation method

▼▲ button: shift items or choose parameters

◄► button: change the parameters

ENTER button: confirm the setup result

EXIT button: back to main menu

3. Calendar

Press ▲▼ to change the year

Press► or◄ to change month

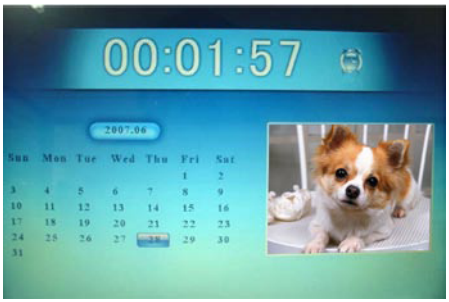

4. Memory select

1. Photo: Select to play photo with slideshow
2. Music: Select to play music
3. Video: Select to play movie
4. Combo: Slideshow pictures with backgroundmusic
5. Edit: Select to copy or delete files

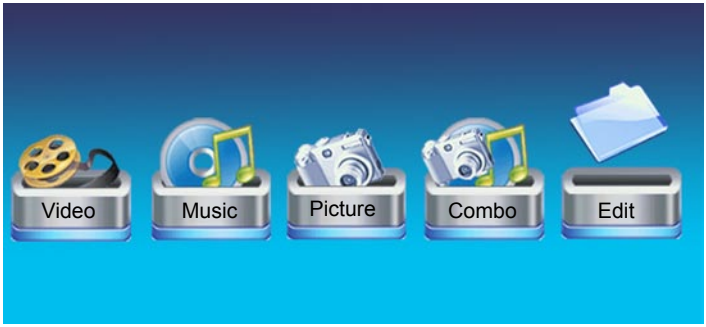

4.1 File Edit

Select EDIT icon

- All the files and folders will be listed on the screen
- Press▲▼ to choose different files
- Press ▶ to select one file, a √ will be marked beside the file
- To deselect the file by pressing ▶ again

COPY

- After file selection, press **MENU** and select "copy"
- Press **ENTER** to select the copy to destination
- Press ▶ then **ENTER**

DELETE

- After file selection, press **MENU** and select "delete"
- Press **ENTER** to select "delete"
- Select √ then **ENTER** to delete selected file

4.2 Photo Display

- Choose photo icon to call up photo preview mode
- Press ◀▲▼▶ to choose photos and press **ENTER** to play

- Press **MENU** to call out the info bar
- Press ▶/◀ and **ENTER** to make selection on the info bar

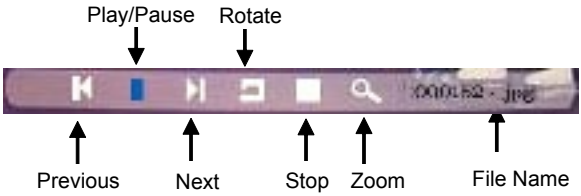

4.3 Movie Display

- Choose movie icon to call out movie preview mode
- Press ▲▼ to choose movie and press **ENTER** to play

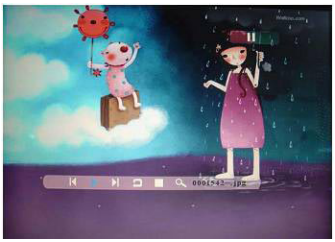

- Press **MENU** to call up the info bar
- Press ▶/◀and **ENTER** to make selection on the info bar

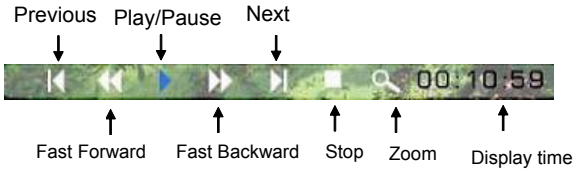

4.4 Music Display

- Choose music icon to call up music preview mode
- Press ▲▼ to choose music and press **ENTER** to play

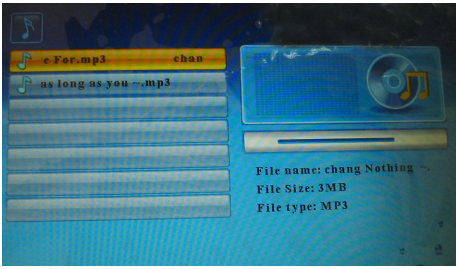

4.5 Combo Display (picture slideshow with music)

- Choose combo icon to call up combo preview mode
- Press ▲▼ to choose music and press **ENTER** to play

Press VOL ⊕/ ⊖ on remote control to adjust the volume

OSD Menu

OSD Menu	Sub-Menu & Function Description
Function Menu	
Photo	Picture Slideshow
Music	MP3 display
Movie	Video display
Combo	Picture & music display
Edit	Copy / Delete
Calendar	Calendar / Clock / Alarm
Memory Menu	
SD/MMC MS CF USB flash drive Internal Memory	
Settings	
Language	Multi language
Slideshow Time	3/5/15 seconds, 1/15min, 1 hour
Slideshow Mode	14 modes
Music Repeat Mode	Repeat all/ one/ off
Movie Repeat Mode	Repeat all/ one/ off
Display Mode	Original -- original picture ratio display Stretch -- full screen picture display with abnormal ratio Crop -- full screen picture display with normal ratio by cutting
Time	Year Month Day Hour Minute
Alarm	Hour Minute (Ring 1/2/3)
Brightness	brightness adjust
Contrast	contrast adjust
Saturation	saturation adjust
Auto Power on Time	time to turn on automatically
Auto Power off Time	time to turn off automatically
Splitscreen Function	multi photos display by one screen show
Auto Play	picture / music / movie / calendar / main menu
Default	restore to the factory settings

*The above settings are subject to change in case of any spec modification.

Frequently Asked Questions

Q. Why can't the Digital Photo Frame play all images or movie files?
A: The Digital Photo Frame can support JPEG, MP3 and some video format depending on the product specification. It may not read some files dowloaded from the internet.

Q. I have a memory card in the Digital Photo Frame, but it's not reading the card, what should I do?
A: First, make sure that you are using a memory card that is supported by the Digital Photo Frame. Second, ensure that the memory card is inserted all the way into the correct slot. Third, choose the correct card icon which you want to play.

Q. Why do some pictures load faster than others?
A: Higher resolution pictures usually load slower.

Q: Who can I contact if I am having trouble setting up my DPF?
A: Email: support@shintaro.com.au

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.
NOTE: All rights for modifications reserved

support@shintaro.com.au